




INSTALLATION GUIDE

SPRINTER SEAT BASE MOLLE PANEL

SP1016B

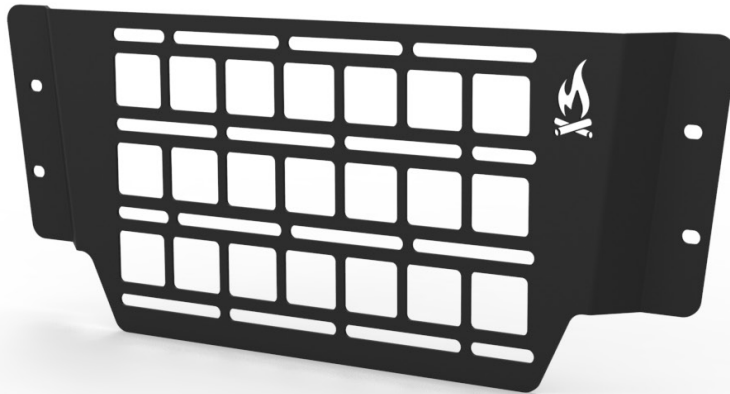

TOOLS REQUIRED (NOT INCLUDED)

- + 4MM ALLEN WRENCH
- + 10MM WRENCH
- + E12 TORX SOCKET
- + POWER DRILL
- + 10MM DRILL BIT
- + RIVET NUT TOOL

INSTALL INFO

TIME TO INSTALL THIS PRODUCT: 30-60 MINUTES

Additional help is suggested for a few of the install steps.

BEFORE YOU START

Please inspect the product and packaging upon delivery to ensure there are no issues and that all parts and hardware are accounted for.


Contact us ASAP if anything is missing at:
support@flatlinevanco.com

BEFORE YOU START

All Flatline Van Co products must be properly assembled and secured before attaching to your vehicle. Improper attachment could result in an automobile accident, and could cause serious bodily injury or death to you or to others involved. You are responsible for assembling and securing Flatline Van Co products to your vehicle, checking the mounting points and attachments prior to use, and regularly inspecting the products for wear and or damage. We always recommend you use a professional to install any aftermarket accessories to your vehicle. If you have no mechanical experience and are not thoroughly familiar with the installation procedures, you must have the product installed by a professional installer or other qualified persons. The responsibility is yours and must be taken seriously for everyone's safety.




PACKAGE CONTENTS

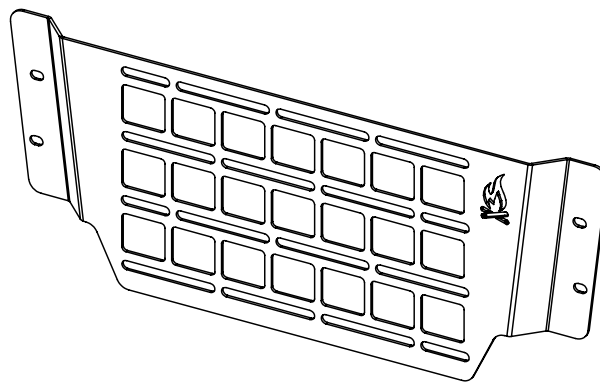

MOLLE PANEL

QTY: 1

HARDWARE

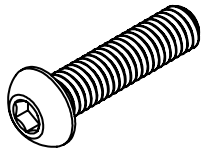

M6-1 X 25 BUTTON HEAD
HEX DRIVE SCREW

QTY: 4



M6 FLAT WASHER

QTY: 8



M6-1 NYLON INSERT LOCKNUT

QTY: 4



M6-1 x 0.7-4.2 THK HEAVY
DUTY RIVET NUT

QTY: 4

STEP | 01 LAYOUT AND INSTALL PREP

1.1 Choose Install Location: The **Seat Base Molle Panel** can be installed on *either* the **Driver** or **Passenger** seat base.

NOTE - *The presence of pre-existing interior accessories, such as a diesel heater, may impact your installation.*

1.2 Choose Install Method: You can choose between a standard **Nut and Bolt** installation or a **Rivet Nut** installation depending on your preference and available tools.

TOOLS REQUIRED FOR THIS STEP:



FIG 1

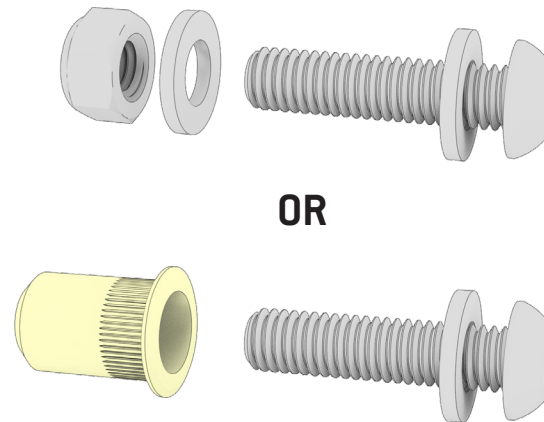


FIG 2

TOOLS REQUIRED FOR THIS STEP: + E12 TORX SOCKET

STEP | 01 LAYOUT AND INSTALL PREP

1.3 Gain Internal Access: You must be able to reach the inside of the seat base to secure the nuts.

Driver Side: If through-bolting, remove the driver side seat using an **E12 Torx Socket** (FIG 3-4).

Passenger Side: Either remove the passenger side seat using an **E12 Torx Socket** or remove the plastic access panel located on the side of the seat base (FIG 5).



FIG 3

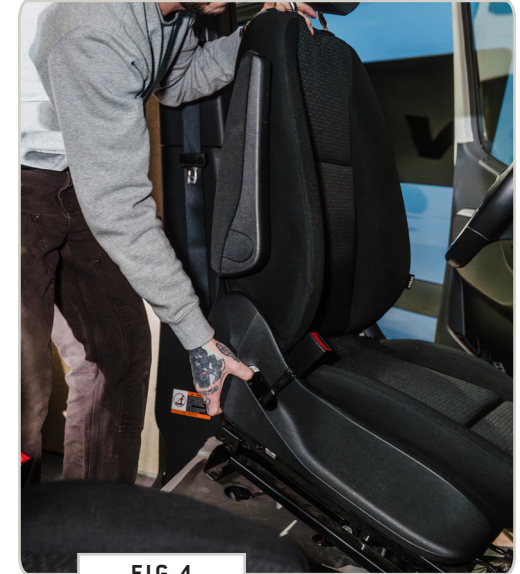


FIG 4



FIG 5

STEP | 02A NUT AND BOLT INSTALL

2.1a Align the Panel: Position the **Molle Panel** against the back of the seat base, aligning the panel slots with the factory holes (FIG 6).

2.2a Secure Panel: From the outside, insert an **M6-1 X 25mm Screw** and **Flat Washer** through the **Panel** and **Seat Base**. From the inside of the seat base, add another **Flat Washer** and **Nylon Locknut** to the screw and tighten it down. Repeat this process for the remaining three mounting points (FIG 7).

TOOLS REQUIRED FOR THIS STEP:

- + 4MM ALLEN WRENCH
- + 10MM SOCKET



STEP | 02B RIVET NUT INSTALL

2.1b Drill Out Holes: Drill: Using a **10mm Drill Bit**, carefully drill out the factory holes shown **(FIG 8)**.

NOTE - Use a drill stop to ensure you do not strike any internal components or wiring inside the seat box.

2.2b Install Rivet Nuts: Use a **Rivet Nut Tool** with **M6 Mandrel** to install the rivet nuts into the newly drilled holes.

2.3b Mount Panel: Align the panel with the rivet nuts and secure it using **(4) M6-1 X 25mm Screws** and **Flat Washers** **(FIG 9)**.

TOOLS REQUIRED FOR THIS STEP:

- + POWER DRILL
- + 10MM DRILL BIT
- + RIVET NUT TOOL
- + 4MM ALLEN WRENCH



FIG 8



FIG 9

GET OUT AND EXPLORE!

+ LEAVE US A REVIEW

Happy with your new FVC product? We would love to hear (and see) from you! Head to the product page and click "Leave Review." Add a short review and upload a few photos to be showcased on the product page.

+ SHARE YOUR PICS

We love seeing how our customers use their FVC products and following along with your adventures. Tag us in your photos with: @flatlinevanco or send them to us via email. We love posting customer pictures in our feed!

+ NEED ANY HELP?

If you are having any issues with your product, please reach out, and we will make it right. FVC is a company of van and outdoor enthusiasts that design and use our own products, so we want you to be as stoked on your new parts as we are!



@FLATLINEVANCO